










BFME-ADAPTER



BESTELL-NUMMER		BESCHREIBUNG
BFME-BNC		schwarzer FME→BNC (male) Adapter
BFME-TNC		schwarzer FME→TNC (male) Adapter
BFME-N		schwarzer FME→N (male) Adapter
BFME-UHF		schwarzer FME→UHF (male) Adapter
BFME-MUHF		schwarzer FME→Mini-UHF (male) Adapter
BFME-MQ		schwarzer FME→MiniQuick (male) Adapter
BFME-EBNC		schwarzer FME→Winkel-BNC (male) Adapter
BFME-ETNC		schwarzer FME→Winkel-TNC (male) Adapter
BFME-EMUHF		schwarzer FME→Winkel-Mini-UHF (male) Adapter

PROCOM A/S behält sich das Recht vor, Änderungen ohne vorherige Ankündigung vorzunehmen.