



Specification

Part Numbers	227674100-1 : 230Vac; 227674100-2 : 110Vac; 227674100-4 : 24Vdc.
Type	Capacitance Level Indicator with 0-10 Volt and 4-20mA outputs.
Supply	Either 110 / 230V : 50Hz : 5VA : Tolerance : +10%, -15%. ac voltages factory set by internal links. Or +24V DC : 4W : Tolerance : ± 10%.
Signal Input	0.2 - 3.2 Volts DC from 88 Series capacitance probe or Band Electrode. Capacity ranges 10-250pF, 200-500pF, $C_{o(Max)}$ - 250pF : $R_{(input)}$ - 820Ω.
Transducer Supply Controls	8.5 Volt stabilised at 13mA. Set Zero (0%). Set Full Scale output (100%). Set Sensitivity - High/Low.
Outputs	0 -10 Volts at $R_{(Min)}$ = 10kΩ. 4-20mA at constant Current at $R_{(Max)}$ = 500Ω. 4-20mA output is short circuit proof.
Monitor	Digital Panel Meter - 3½ Digit with 0.1% resolution. Display Accuracy ± 0.5% ± 1 digit of output voltage. 4-20mA accuracy ± 0.5% of output voltage.
Operating Temperature	-10°C to 50°C.
Housing	T16 - ABS case with glass loaded polyester base.
Fixing	Base mounted by 2 x 4mm diameter blind holes for screws or clip mounting to symmetrical DIN rail.
Protection	IP30 BS56490/IEC 529.
Cable Entry	5 removable blind grommets. 2 knockouts in base - 15mm diameter.
Weight	0.80 kg nett.
Size	76mm x 150mm x 107mm overall.

Note: We reserve the right to alter the design or specification of this product without prior notice.

AFRISO EUROGAUGE LTD

Unit 4, Satellite Business Village,
Fleming Way, Crawley
West Sussex. RH10 9NE
Tel: +44 (0)1293 658360
Fax: +44 (0)1293 528270
www.eurogauge.co.uk
sales@eurogauge.co.uk

- RADAR and MICROPULSE
- ULTRASONICS
- PRESSURE TRANSMITTERS
- VIBRATION SWITCHES
- CAPACITANCE
- Float Level Switches
- Conductivity
- Rotary Paddle and 'Plumb bob'
- Magnetostrictive
- Self-powered gauges
- Oil/water Alarms
- Leak Detectors
- Pressure and Temperature



Declaration of Conformity

EFM741 Capacitance Level Indicator

This is to certify that the above named product fully complies with the Electromagnetic Compatibility Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC of the European Union and with the requirements of the normative sections of the following harmonised European Standards.

- | | |
|------------|--|
| EN61000-3: | Electromagnetic Compatibility - Generic Emission Standard. Residential, Commercial and Light Industry. |
| EN61000-2: | Electromagnetic Compatibility - Generic Immunity Standard. Heavy Industry. |
| EN61010-1: | Safety requirements for electrical equipment for measurement, control and laboratory use. |

Signed:

(D C Ward)

Position: Technical Services Manager,
Date: 04/04/2006

This declaration applies to the following part number(s):
227674100-1 : 230V ac version.
227674100-2 : 110V ac version.
227674100-4 : 24V dc version



Application

The **EFM741 Capacitance Level Indicator** is designed for continuous level indication in tanks/silos containing products suitable for use with Eurogauge probes, and within the range of either the series 3640 Level Indicator Transducer or the Series 8022 Band Electrode.

General

Application, installation, commissioning and servicing must only be undertaken by suitably qualified personnel authorised to undertake such work and subject to observation of the relevant electrical and any other regulation which may affect the installation as a whole.

Installation

The EFM741 must be located on a flat, vibration free surface which is not exposed to direct sunlight. Connect the system in accordance with the schematic wiring diagram. Connect the Probe/Transducer Assembly to the EFM741 using standard 3-core screened cable kept separate from power carrying cables. **NOTE: MINERAL INSULATED CABLE MUST NOT BE USED!** Ensure that the cable entry connection to the Probe head and Probe Cap is tight to prevent moisture ingress.

Commissioning

The equipment is intended for operation with the electrical supply permanently energised. With the supply switched on and all other electrical connections completed the unit must be allowed to warm up for at least five minutes before attempting any adjustment. Set the sensitivity switch to the high position then proceed as follows:

'Zero' Adjustment with Tank Empty (Probe Uncovered)

1. Turn 100% control Fully clockwise.
2. Turn 0% control Fully clockwise.
3. Turn 100% control If display meter is reading over 100%, turn control anti-clockwise to reduce amplifier gain until display meter shows approximately 80%.
4. Turn 0% control Anti-clockwise to bring display meter reading back down to approximately 5 -10% on meter scale. (Ignore if display meter reads less than 20%).
5. Turn 100% control Clockwise to stop position, i.e. maximum amplification.
6. Turn 0% control To achieve zero reading.

The 0% control must on **no account** be re-adjusted otherwise the instrument will have to be re-calibrated with the tank empty. The tank must now be filled to the normal 100% full level.

'Full' Adjustment with Tank Full

1. Turn 100% Control Slowly turn anti-clockwise to adjust reading on the display meter to between 90% and 95% indication. **Note:** If the reading does not fall below 100%, set the sensitivity switch to the low position.
2. Turn 100% Control Until display meter indicates 100% level.

Calibration is now complete and the Instrument is ready for use


Notes

In installations where the tank cannot readily be emptied for the zero adjustment to be carried out, band or concentric probes should be used, which enable the user to carry out the zero adjustment with the probe outside the tank suspended in free air. However it is recommended that the zero level should be checked and re-adjusted when the tank reaches the actual empty level.

A preliminary full adjustment can also be carried out when the tank cannot be completely filled. Follow the above instructions to set the indication on the meter in accordance with the actual tank contents. In order to avoid possible inaccuracies we strongly recommend that this procedure is only carried out when the tank can be filled to the **exact** half full mark on horizontal cylindrical tanks; then the full adjustment procedure described above can be adopted to set the readout meter to the 50% mark in lieu of 100%. It is essential that the level is checked when the tank has been filled to the full mark and any adjustment made accordingly



Wiring Connections

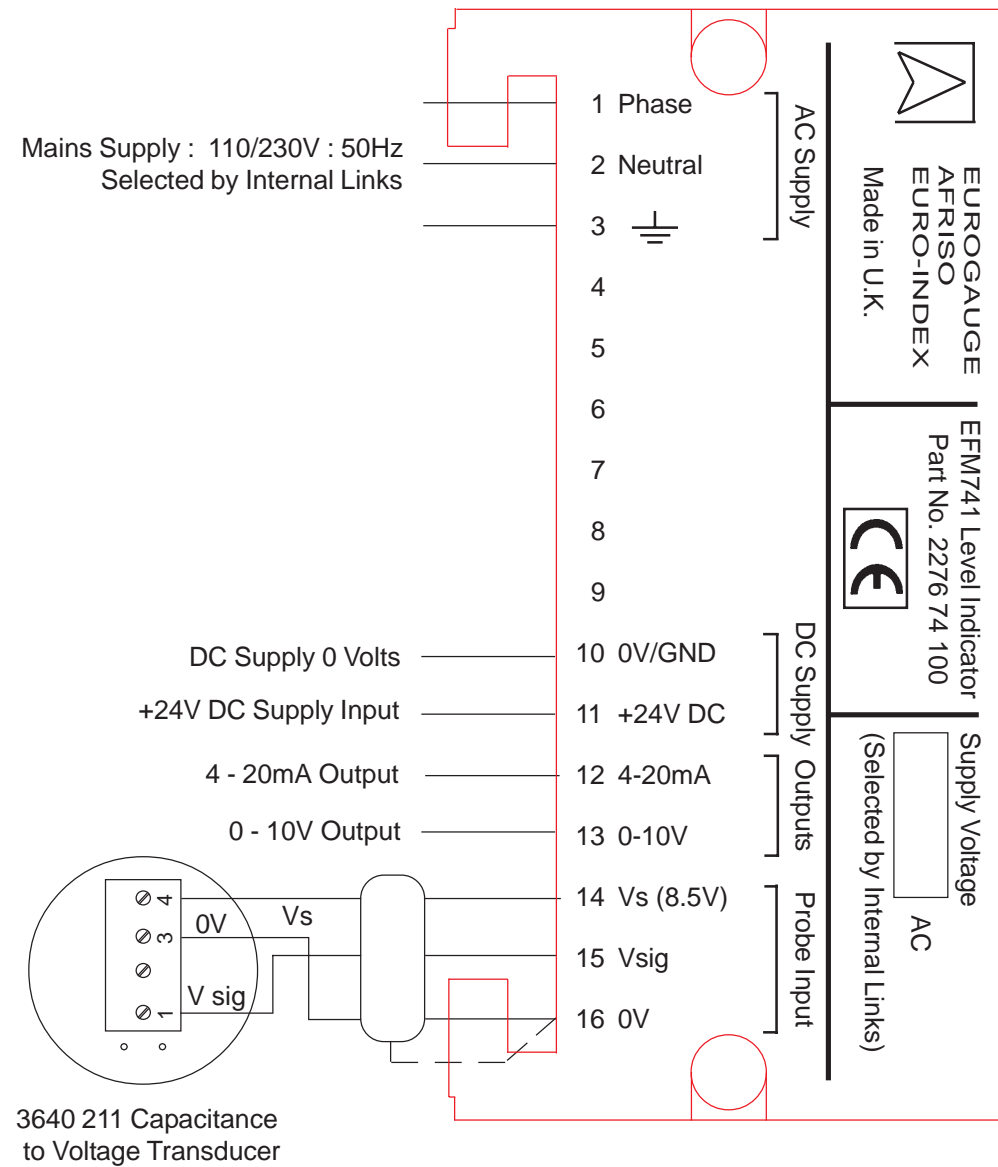

Notes :

Unit is supplied **either** from a 110/230V ac supply connected across terminals 1-3 **or** from a +24V DC Supply connected across terminals 10-11.


Screened Cable to transducer must be grounded at terminal 16.

If a Band Electrode Probe is used then lead connections are:

- '1' = Vsig to terminal 15
- '2' = Vs to terminal 14
- Green/Yellow = 0V to terminal 16.



Front Panel Controls

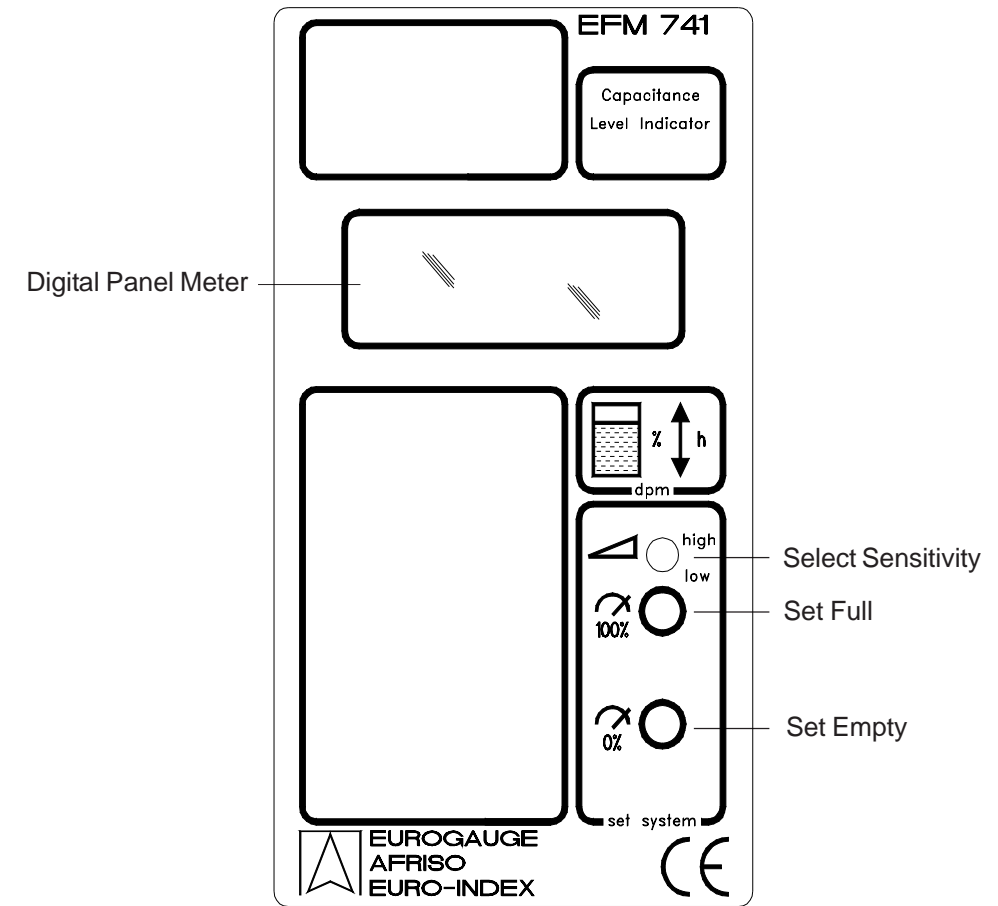

Outline and Dimensions

Housing

ABS Case with polyester base

Fixing

Base mounting by 2 x 4mm dia. blind holes for screws, or clip mounting to symmetrical DIN rail.

Cable Entry

6 removable blind grommets (4 side, 1 top, 1 bottom) plus 2 x 15mm drill outs in base.

